


Roller Shade


Installation Instructions

Installation is easy. The enclosed brackets can be used for either an inside or outside mounted installation. The brackets should be fastened into wood. If mounting into drywall, be sure to use a molly bolt or wall anchor. It is very important that the brackets do not squeeze the blind. When the blind is raised there should be "play" between the roller and brackets.

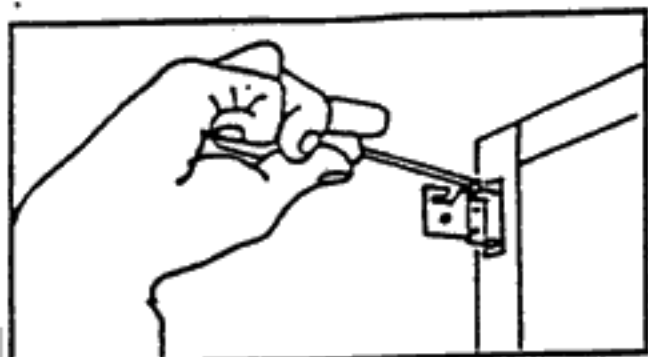


1

Mount the left bracket slotted end up. The right bracket is mounted reversed. For reverse roll mount brackets reversed.

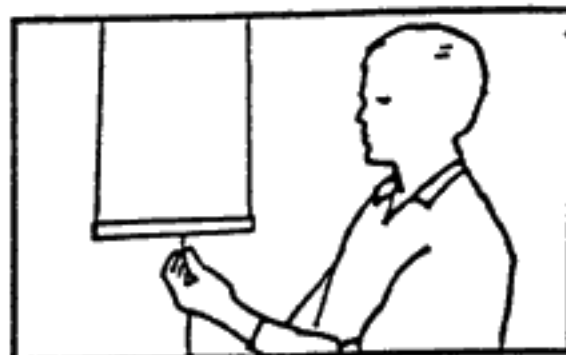

4

Lower the shade 16" from the top to tighten the spring.

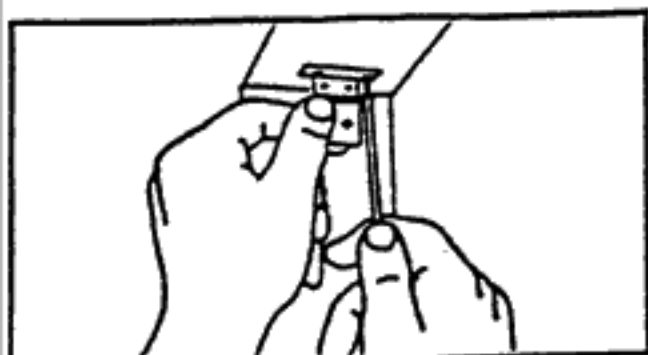


2

Mounting in the ceiling or inside the window opening




5

Lift the shade off the bracket and roll up.

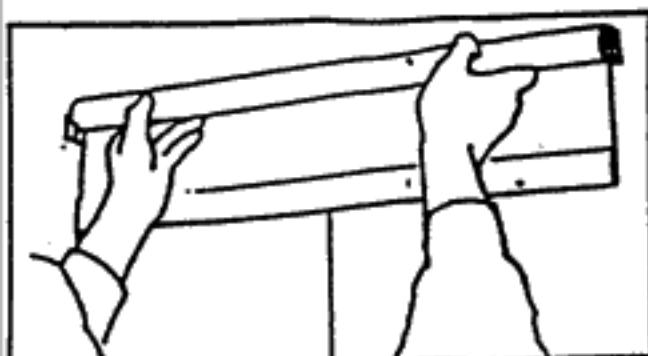

3

Put the shade into the brackets. Insert round end pin into right bracket first. Then insert other end into slot of left bracket.

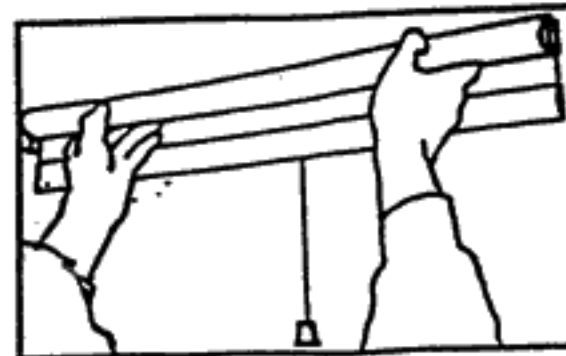

6

Place the shade in the brackets and check whether the spring is tight enough. If not, repeat steps 4 and 5.

Types of Brackets

Type A:




Upper Slotted
Bracket



Round Pin
Bracket

To be used for outside wall mount and ceiling mount.

Outside Mount

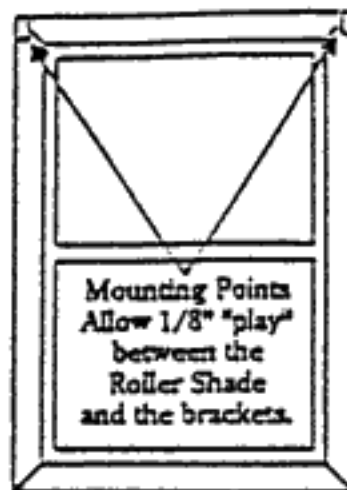

Front View

Type B:


Slotted
Bracket



Round Pin
Bracket

Inside Mount Brackets
(Exact measurement)

Inside Mount

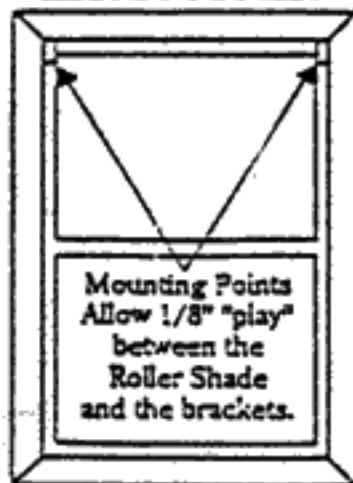

Front View

